




# Kindle 7th Generation Front Panel Replacement

Your frame is cracked or damaged so you need to replace it.

Written By: Abby Roulier

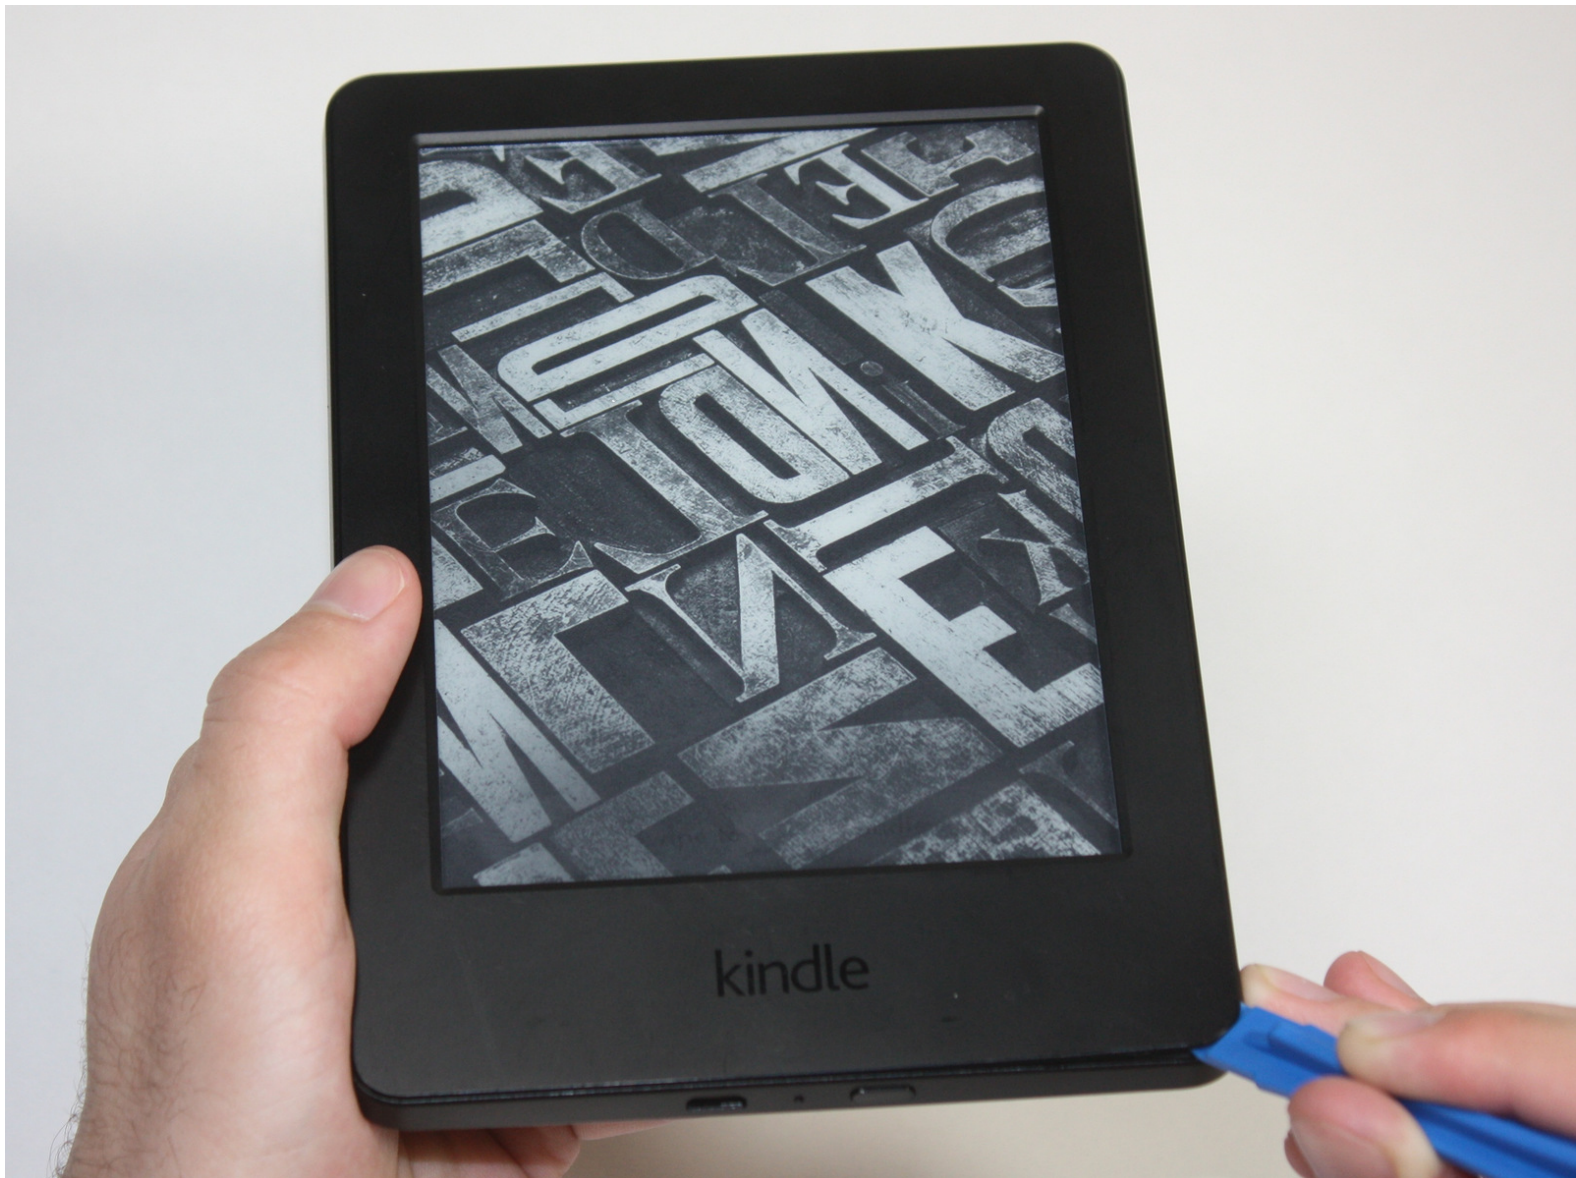




## TOOLS:

- [iFixit Opening Tools](#) (1)
-

## Step 1 — Front Panel

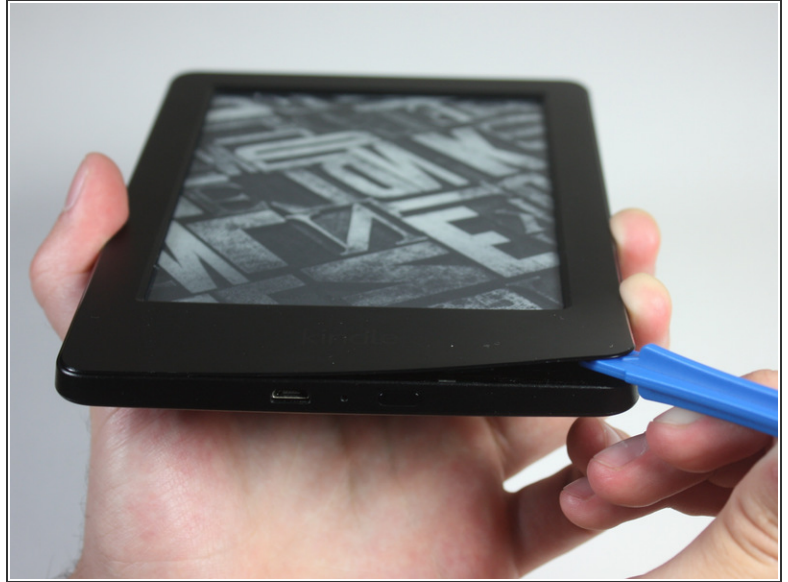

 Power off your Kindle before beginning disassembly.

- At each corner, use the blue plastic opening tool to unhook and separate the front panel from the adhesive.
- Run the tool along the seams to pry open the front panel.

## Step 2



- Peel the front panel off to remove it from the Kindle.
- ⚠ If this is the first time the front panel has been removed, the adhesive may require a significant amount of force to undo.
- To prevent damaging the front panel, peel the panel from the corners towards the middle of the Kindle.
- ★ When reassembling your device, if you are replacing the front panel, additional adhesive may be required.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-17 07:25:34 PM.